

**SAMSUNG**

# COLOUR TELEVISION

## Owner's Instructions

Before operating the unit,  
please read this manual thoroughly,  
and retain it for future reference.

**ON-SCREEN MENUS  
PICTURE IN PICTURE (OPTION)  
TELETEXT**

**VIRTUAL  
DOLBY  
SURROUND**

Register your product at [www.samsung.com/global/register](http://www.samsung.com/global/register)



# Contents

◆ CONNECTING AND PREPARING YOUR TELEVISION	
■ View of Your Television (depending on the model) .....	5
■ Infrared Remote Control (depending on the model) .....	7
■ Inserting the Batteries in the Remote Control.....	9
■ Connecting to an Aerial or Cable Television Network .....	9
■ Switching Your Television On and Off .....	10
■ Placing Your Television in Standby Mode .....	10
■ Becoming Familiar with the Remote Control .....	11
■ Plug & Play Feature.....	12
■ Viewing the Demonstration.....	13
■ Choosing Your Language.....	13
◆ SETTING THE CHANNELS	
■ Storing Channels Automatically.....	14
■ Sorting the Stored Channels .....	15
■ Storing Channels Manually.....	16
■ Skipping Unwanted Channels .....	18
■ Assigning Names to Channels .....	19
■ Fine Tuning Channel Reception .....	20
◆ USING YOUR TELEVISION	
■ Using the LNA (Low Noise Amplifier) feature (depending on the model) .....	21
■ Changing the Picture Standard .....	21
■ Customizing the Picture Settings.....	22
■ Selecting the Picture Size (depending on the model).....	23
■ Extra Picture Settings .....	24
■ Setting the Blue Screen.....	25
■ Using the Tilt Control Feature.....	25
■ Freezing the Current Picture .....	26
■ Changing the Sound Standard .....	26
■ Adjusting the Sound Settings .....	27
■ Extra Sound Settings (depending on the model).....	28
■ Selecting the Melody .....	29
■ Selecting the Sound Mode (depending on the model) .....	30
■ Setting and Displaying the Current Time.....	31
■ Setting the Sleep Timer .....	32
■ Switching the Television On and Off Automatically .....	33
■ Setting the Preferred Volume Level/Channel .....	34
■ Viewing an External Signal Source/Edit Name (depending on the model)....	35
■ Viewing the Picture In Picture (PIP) (depending on the model) .....	36

## Contents (continued)

◆ USING THE TELETEXT FEATURE	
■ Teletext Feature .....	38
■ Displaying the Teletext Information .....	38
■ Selecting a Page by Number.....	39
■ Using FLOF to Select a Page.....	40
■ Storing Teletext Pages .....	40
◆ ADDITIONAL INFORMATION ON CONNECTIONS	
■ Connecting to the External Input/Outputs.....	41
■ Connecting to the Audio Output .....	41
■ Connecting to the RCA Input.....	42
■ Connecting to the S-Video Input.....	42
■ Connecting to the DVD Player .....	43
■ Viewing Pictures From External Sources .....	43
◆ RECOMMENDATIONS FOR USE	
■ Automatic Degaussing to Remove Colour Patches.....	44
■ Troubleshooting: Before Contacting Service Personnel.....	45

Symbols



Press



Important




Note

## View of Your Television (depending on the model)

- The actual configuration on your TV may be different, depending on your model.

### Control Panels

#### Front of the TV

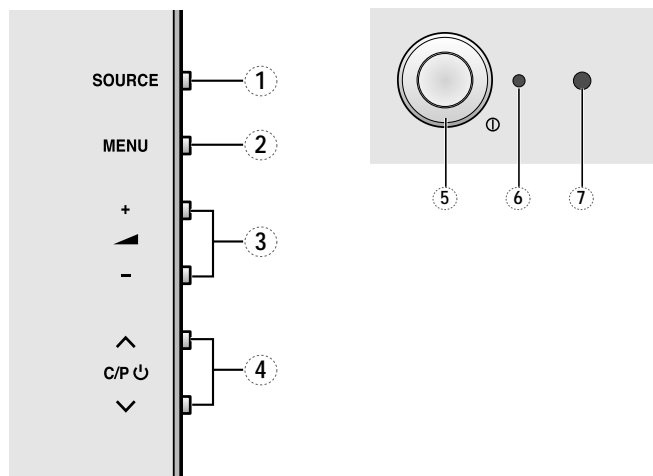

- 1) Input Source Selection
- 2) Menu Display
- 3) Volume Adjustment
- 4) Channel Selection


- 5) Power On/Off
- 6) Standby Indicator
- 7) Remote Control Sensor

- ♦ You can use the **v C/P. ⏻ ^** buttons to switch on the TV when it is in standby mode.
- ♦ The **- ▲ +** and **v C/P. ⏻ ^** buttons have the same function as the **▲/▼/◀/▶** buttons on the remote control.
- ♦ If the remote control no longer works or you have misplaced it, you can use the controls on the panel of the TV.
- If you turn the TV off by pressing the **POWER** button on the front of the TV, you will not be able to turn the TV on using the **POWER** button on the remote control.  
(For more detailed information, refer to page 10.)


## View of Your Television (depending on the model) (continued)

### Connection Panels

*Side of the TV*

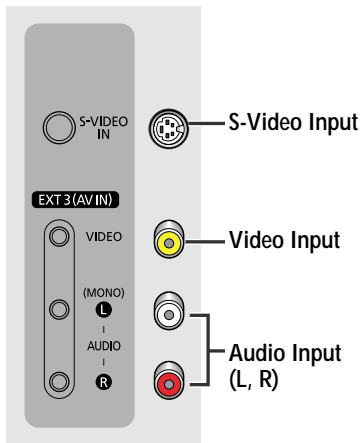


*Rear of the TV*

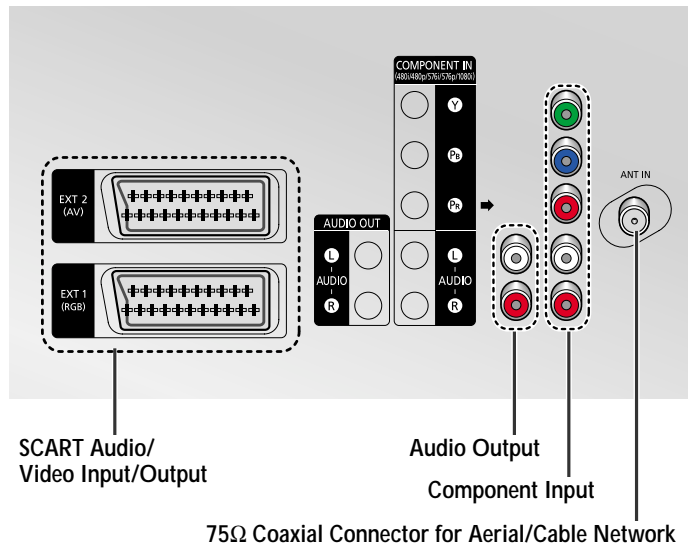


- Available format for Component inputs; 480i, 480p, 576i, 576p, 1080i - 50Hz.

## Infrared Remote Control (depending on the model)

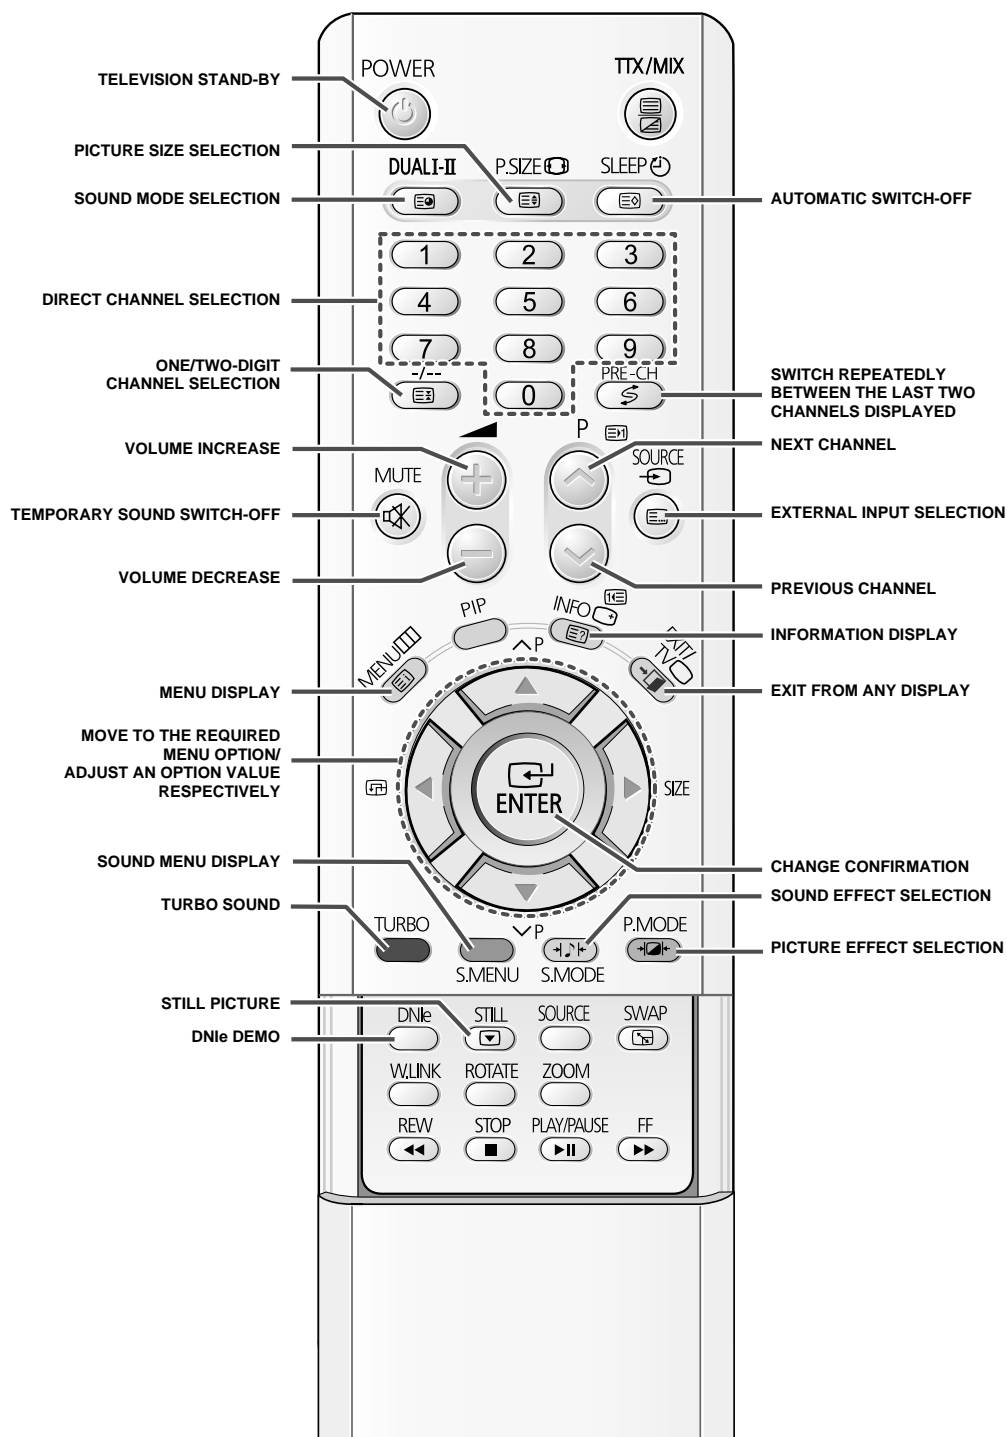

➤ The performance of the remote control may be affected by bright light.

## Infrared Remote Control (depending on the model) (continued)



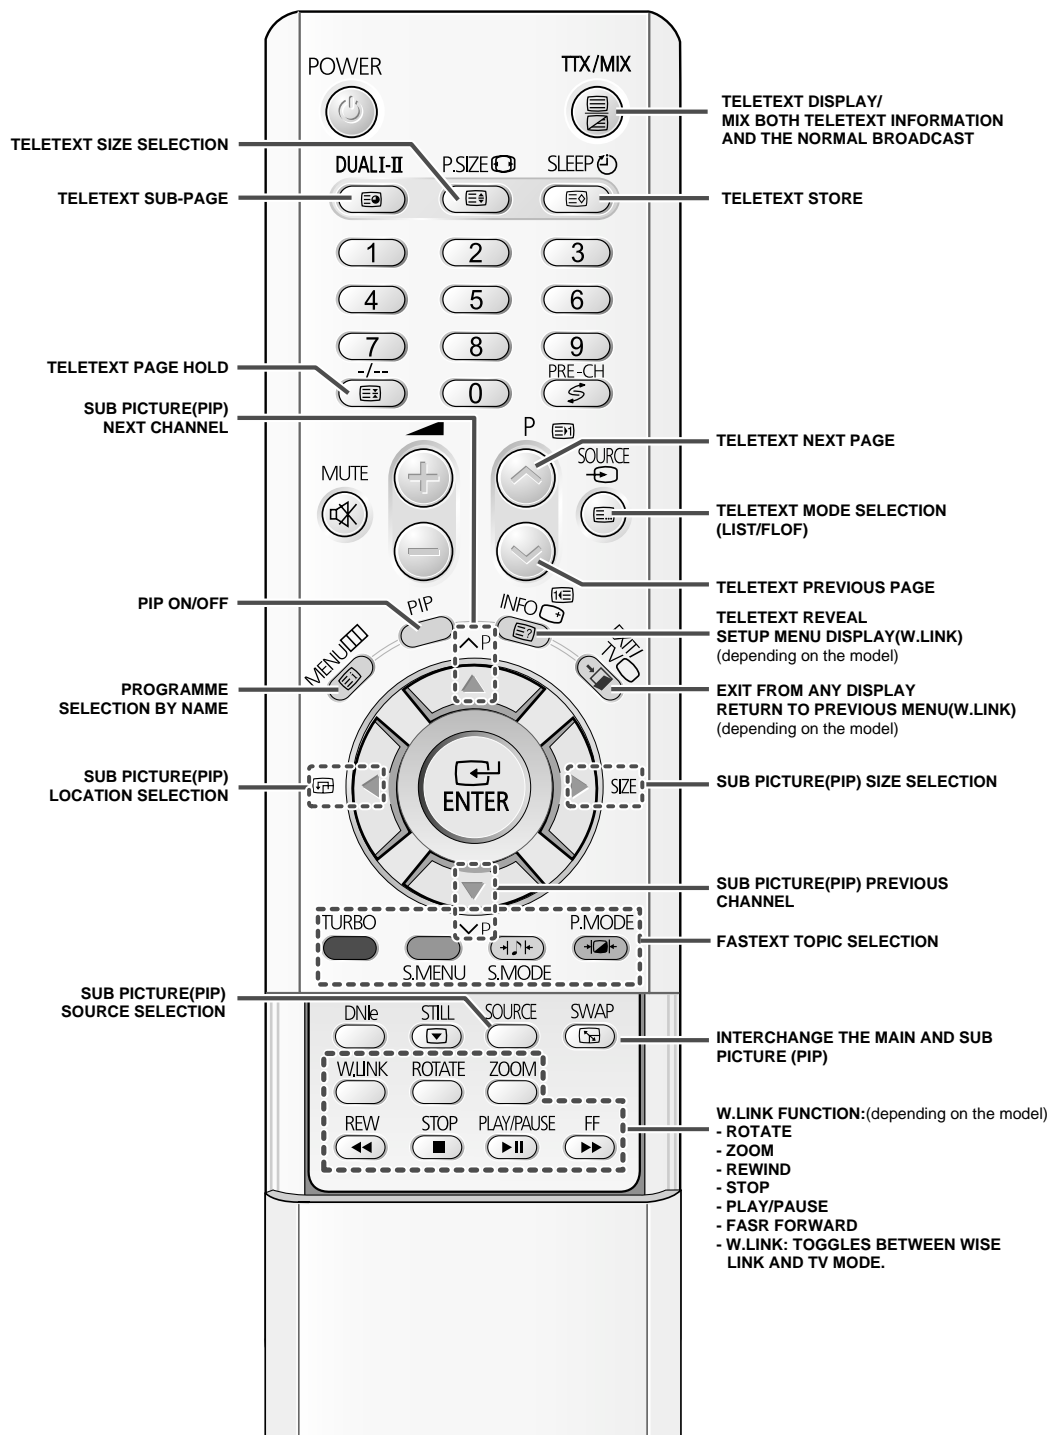




## Inserting the Batteries in the Remote Control

*You must insert or replace the batteries in the remote control when you:*

- ◆ *Purchase the television*
- ◆ *Find that the remote control is no longer operating correctly*

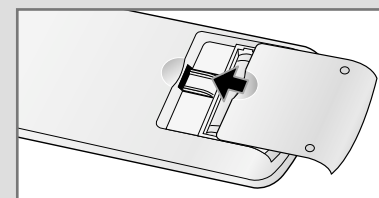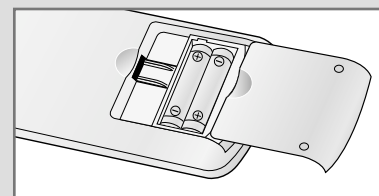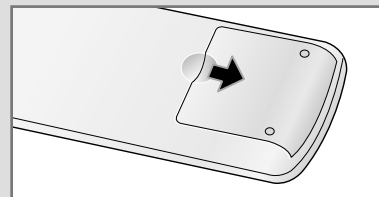


- 1 Remove the cover on the rear of the remote control by pressing the symbol (▼) downwards and then pulling firmly to remove it.
- 2 Insert two R03, UM4, "AAA" 1.5V or equivalent batteries taking care to respect the polarities:
  - ◆ - on the battery against - on the remote control
  - ◆ + on the battery against + on the remote control
- 3 Replace the cover by aligning it with the base of the remote control and pressing it back into place.

## Connecting to an Aerial or Cable Television Network


*To view television channels correctly, a signal must be received by the set from one of the following sources:*

- ◆ *An outdoor aerial*
- ◆ *A cable television network*
- ◆ *A satellite network*

- 1 In the first three cases, connect the aerial or network input cable to the 75Ω coaxial socket on the rear of the television.
- 2 If you are using an indoor aerial, you may need to turn it when tuning your television until you obtain a picture that is both sharp and clear.  
For further details, refer to:
  - ◆ "Storing Channels Automatically" on page 14
  - ◆ "Storing Channels Manually" on page 16

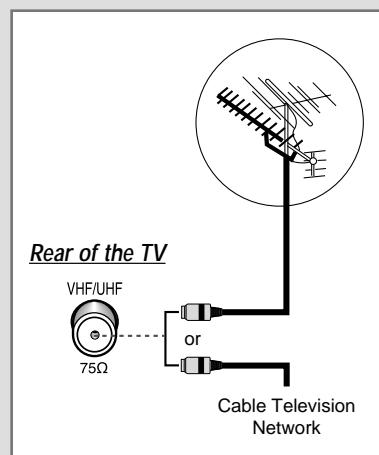


## Switching Your Television On and Off

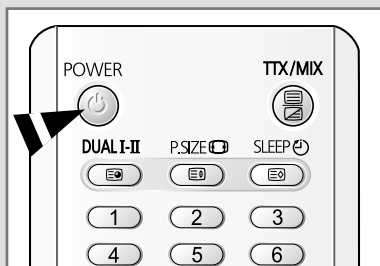

*The mains lead is attached to the rear of your television.*

- 1 Plug the mains lead into an appropriate socket.  
➤ The main voltage is indicated on the rear of the television and the frequency is 50 or 60Hz.
- 2 Press the "⏻" button (On/Off) on the front of the television.  
**Result:** The Standby indicator on the front of the television lights up.
- 3 Press the **POWER** (⏻) button on the remote control to switch the television on.  
**Result:** The programme that you were watching last is re-selected automatically.  
➤ If you have not yet stored any channels, No clear picture appears. Refer to "Storing Channels Automatically" on page 14 or "Storing Channels Manually" on page 16.
- 4 To switch your television off, press the "⏻" button (On/Off) again.

## Placing Your Television in Standby Mode

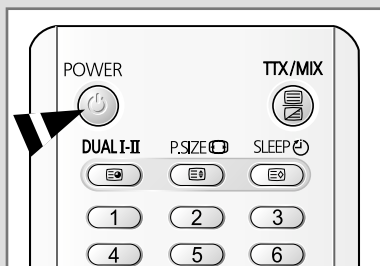

*Your television can be placed in Standby mode, in order to reduce:*

- ◆ *Power consumption*
- ◆ *Wear of the cathode ray tube*

*The Standby mode can be useful when you wish to interrupt viewing temporarily (during a meal, for example).*

- 1 Press the **POWER** (⏻) button on the remote control.  
**Result:** The screen is turned off and the Standby indicator on the front of the television lights up in red.
- 2 To switch the television back on, simply press the **POWER** (⏻) button again.  
➤ You can also switch on by pressing the **TV** (□), **P** (⏻), or numeric buttons.





 
 











 Do not leave your television in Standby mode for long periods of time (when you are away on holiday, for example). Turn your television off by pressing the "⏻" button (On/Off) on the front of the television. It is best to unplug the set from the mains and aerial.


# Becoming Familiar with the Remote Control

The remote control is used mainly to:

- ◆ Change channels and adjust the volume
- ◆ Set up the television using the on-screen menu system

The following table presents the most frequently used buttons and their functions.

Button	Viewing Function	Menu Function
	Used to display the next stored channel.	–
	Used to display the previous stored channel.	–
	Used to display the corresponding channels.	
	Used to select a channel numbered ten or over. Press this button, and the “--” symbol is displayed. Enter the two-digit channel number.	
<b>PRE-CH</b>	Press the <b>PRE-CH</b> button. The TV will switch to the last channel viewed.  To quickly switch between two channels that are far apart, tune to one channel, then use the number button to select second channel. Then, use the <b>PRE-CH</b> button to quickly alternate between them.	
	Used to increase the volume.	–
	Used to decrease the volume.	–
<b>MUTE</b> 	Used to switch the sound off temporarily.   To turn the sound back on, press this button again, or press the  or  button.	
<b>MENU</b> 	Used to display the on-screen menu system.	Used to return to the previous menu or normal viewing.
	–	Used to: ◆ Display a submenu containing selections for the current menu option ◆ Increase/decrease a menu option value
	–	Used to confirm your choice.
<b>EXIT</b> 	–	Used to exit from the menu system and return to normal viewing directly.
<b>TV</b> 	Used to switch the television on when it is in Standby mode.	Used to exit from the menu system and return to normal viewing directly

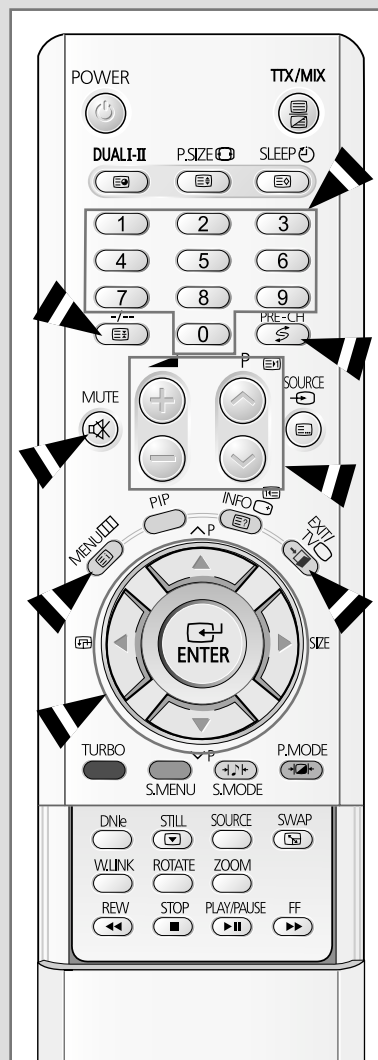


## Plug & Play Feature

### Plug & Play




Check antenna input.

Move Skip

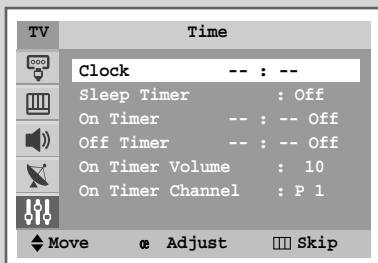

Enjoy your watching.

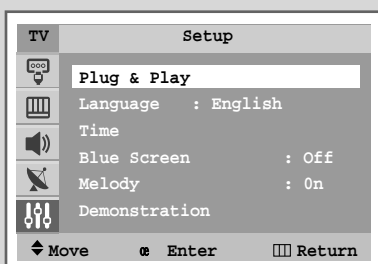

English - 12

When the television is initially powered on, three basic customer settings proceed automatically and subsequently: setting the language, channel and clock.

- 1 If the television is in Standby mode, press the **POWER** (⏻) button on the remote control.

**Result:** The message **Plug & Play** is displayed. It flickers for a little while and then **Language** menu is automatically displayed.

- 2 Select the appropriate language by pressing the **▲** or **▼** button. Press the **MENU** (⏻) button to enter the language.

**Result:** The message **Check antenna input.** is displayed.

➤ If any language is not selected on the **Language** menu, the **Language** menu will disappear about 30 seconds later.

- 3 Make sure that the antenna is connected to the TV. Press the **⏻** or **⏻** button.

**Result:** The **Auto Store** menu is displayed with **Country** is selected.

- 4 Select your country by pressing the **⏻** or **⏻** button. To search the channels, select **search** by pressing the **▲** or **▼** button, and then press the **⏻** or **⏻** button. Press the **MENU** (⏻) button to stop the search.

**Result:** The **Time** menu is displayed with **clock** is selected.

➤ Refer to "Storing Channels Automatically" on page 14.

- 5 Press the **⏻** or **⏻** button to move to the hour or minute. Set the hour or minute by pressing the **▲** or **▼** button.

➤ Refer to "Setting and Displaying the Current Time" on page 31.

- 6 When you have finished, press the **MENU** (⏻) button.

**Result:** The message **Enjoy your watching.** is displayed, and then the channel which has been stored will be activated.

- 7 If you want to reset this feature...

- 1 Press the **MENU** (⏻) button.

- 2 Press the **▲** or **▼** button to select **Setup**, and then press the **⏻** or **⏻** button.

**Result:** The **Plug & Play** is selected.



- 3 Press the **⏻** or **⏻** button again.

**Result:** This feature starts with the message **Plug & Play** is displayed.

➤ When you wish to exit from the Plug & Play, press the **EXIT** (→) button on the remote control.

## Viewing the Demonstration


To become familiar with the various menus provided by your television, you can view the inbuilt demonstration.

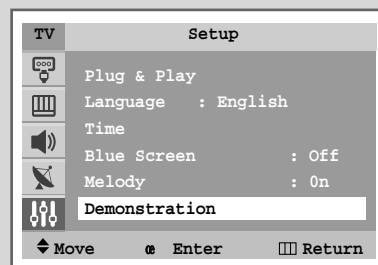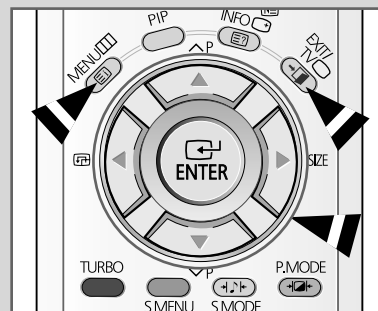

- 1 Press the **MENU** (□□□) button.  
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.  
Result: The options available in the **Setup** group are displayed.
- 3 Press the **⌂** or **□** button.
- 4 Press the **▲** or **▼** button to select **Demonstration**.
- 5 Press the **⌂** or **□** button.  
Result: Each of the menu options is displayed in turn.  
➤ When you wish to exit from the demonstration, press the **EXIT** (→□) button on the remote control.




## Choosing Your Language

When you start using your television for the first time, you must select the language which will be used for displaying menus and indications.

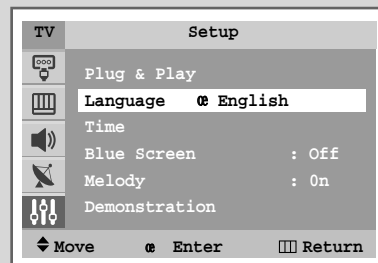

- 1 Press the **MENU** (□□□) button.  
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Setup**.  
Result: The options available in the **Setup** group are displayed.
- 3 Press the **⌂** or **□** button.
- 4 Press the **▲** or **▼** button to select **Language**.
- 5 Press the **⌂** or **□** button.
- 6 Select the appropriate language by pressing the **▲** or **▼** button repeatedly.

## Storing Channels Automatically

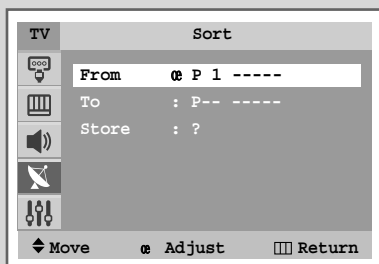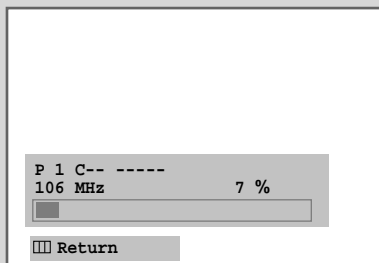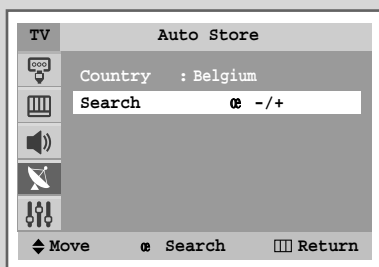

*You can scan for the frequency ranges available to you (and availability depends on your country). Automatically allocated programme numbers may not correspond to actual or desired programme numbers. However you can sort numbers manually and clear any channels you do not wish to watch.*

- 1 Press the **MENU** (□□□) button.

Result: The main menu is displayed.

- 2 Press the ▲ or ▼ button to select **Channel**.

Result: The options available in the **Channel** group are displayed.

- 3 Press the ⌘ or button.

Result: The **Auto Store** is selected.

- 4 Press the ⌘ or button again.

Result: The options available in the **Auto Store** group are displayed with **Country** is selected.

- 5 Select your country by pressing the ⌘ or button. The countries are displayed in the following order:

**Belgium - France - Germany - Italy - Netherlands - Spain - Sweden - Switzerland - United Kingdom - Others - Eastern Europe**

- 6 Press the ▲ or ▼ button to select **Search**.

- 7 Press the ⌘ or button to start the search.

Result: The horizontal bar is displayed, and then channels are stored in an order which reflects their positions in the frequency range. Finally, the search will end automatically.

➤ To stop the search before it has finished, press the **MENU** (□□□) button.

- 8 When searching and storing are complete, the **Sort** menu is displayed.

◆ To sort the stored channels into the desired numerical order, go to Step 6 of the "Sorting the Stored Channels" procedure on page 15.

◆ To exit from the channel store function without sorting the channels, press the **MENU** (□□□) button repeatedly until the menus disappear.

- 9 When the channels have been stored, you can:

- ◆ Sort them in the order required (refer to page 15)
- ◆ Clear a channel (refer to page 18)
- ◆ Assign a name to the stored channels (refer to page 19)
- ◆ Fine tune channel reception if necessary (refer to page 20)
- ◆ Activate the Digital Noise Reduction feature (refer to page 24)

## Sorting the Stored Channels

*This operation allows you to change the programme numbers of stored channels. This operation may be necessary after using auto store. You can delete the channels you do not want to keep.*

- 1 Press the **MENU** (□□□) button.

Result: The main menu is displayed.

- 2 Press the ▲ or ▼ button to select **Channel**.

Result: The options available in the **Channel** group are displayed.

- 3 Press the ⌘ or button.

- 4 Press the ▲ or ▼ button to select **Sort**.

- 5 Press the ⌘ or button.

Result: The options available in the **Sort** group are displayed with **From** is selected.

- 6 Select the channel number that you wish to change by pressing the ⌘ or button repeatedly.




- 7 Press the ▲ or ▼ button to select **To**. Select the new channel number which you wish to identify by pressing the ⌘ or button repeatedly.

➤ You can also select the channel number directly by pressing the numeric buttons (0~9).

- 8 Press the ▲ or ▼ button to select **Store**. Select **OK** to confirm the exchange of channel numbers by pressing the ⌘ or button.

Result: The selected channel is exchanged with the one previously stored to the chosen number.

- 9 For all the channels to move to the required channel numbers, repeat steps 6 to 8 after selecting the **From** by pressing the ▲ or ▼ button.


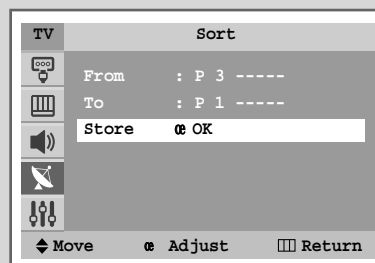
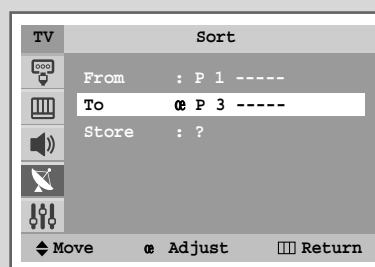
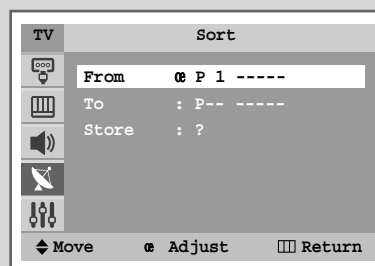


## Storing Channels Manually

You can store up to 100 television channels, including those received via cable networks.

When storing channels manually, you can choose:

- ◆ Whether or not to store each of the channels found
- ◆ The programme number of each stored channel which you wish to identify

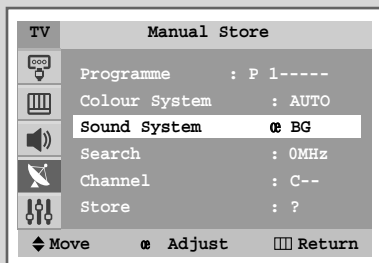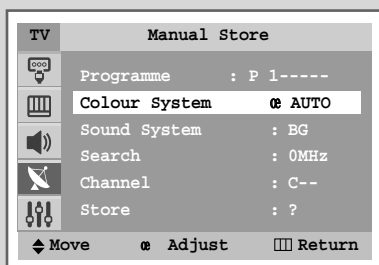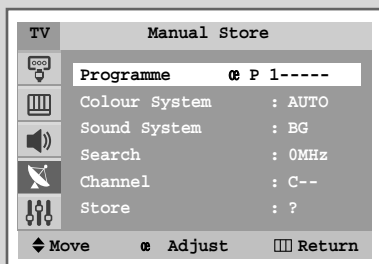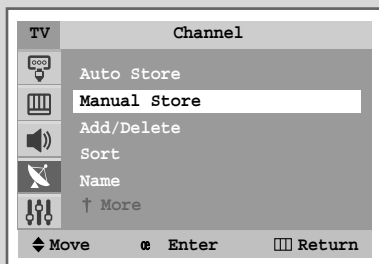

- 1 Press the **MENU** (□□□) button.  
Result: The main menu is displayed.
- 2 Press the ▲ or ▼ button to select **Channel**.  
Result: The options available in the **Channel** group are displayed.
- 3 Press the ⌘ or button.
- 4 Press the ▲ or ▼ button to select **Manual Store**.
- 5 Press the ⌘ or button.  
Result: The options available in the **Manual Store** group are displayed with **Programme** is selected.
- 6 To assign a programme number to a channel, press the ⌘ or button.
- 7 Press the ▲ or ▼ button to select **Colour System**. Indicate the broadcasting standard required by pressing the ⌘ or button repeatedly.  
Result: The colour standards are displayed in the following order:  
**AUTO - PAL - SECAM - NT4.43**
- 8 Press the ▲ or ▼ button to select **Sound System**. Select the sound standard required by pressing the ⌘ or button repeatedly.  
Result: The sound standards are displayed in the following order:  
**BG - DK - I - L**



## Storing Channels Manually (continued)




- 9 If you know the number of the channel to be stored, see the following steps.
  - ◆ Press the ▲ or ▼ button to select **Channel1**.
  - ◆ Press the **Enter** button.
  - ◆ Press the ▲ or ▼ button to select **c** (Air channel) or **s** (Cable channel).
  - ◆ Press the **Enter** button.
  - ◆ Press the ▲ or ▼ button to select indicate the required number.
    - You can also select the channel number directly by pressing the numeric buttons (0~9).
  - If no sound or abnormal sound, re-select the sound standard required.
- 10 If you do not know the channel numbers, select **Search** by pressing the ▲ or ▼ button. Press the **Enter** or **Exit** button to start the search.
 

**Result:** The tuner scans the frequency range until the first channel or the channel that you selected is received on your screen.
- 11 To store the channel and associated programme number, select **Store** by pressing the ▲ or ▼ button. Press the **Enter** or **Exit** button to select **OK**.
- 12 Repeat Steps 9 to 11 for each channel to be stored.





### Channel mode

- ◆ **P** (Programme mode): When completing tuning, the broadcasting stations in your area have been assigned to position numbers from P00 to max P99. You can select a channel by entering the position number in this mode.
- ◆ **C** (Real channel mode): You can select a channel by entering the assigned number to each air broadcasting station in this mode.
- ◆ **S** (Cable channel mode): You can select a channel by entering the assigned number for each cable channel in this mode.

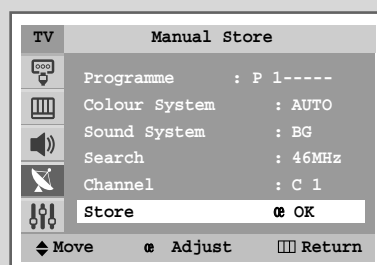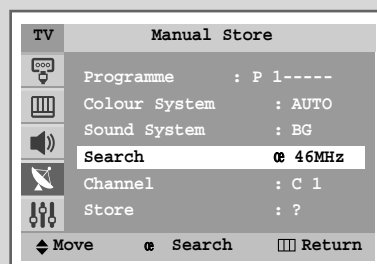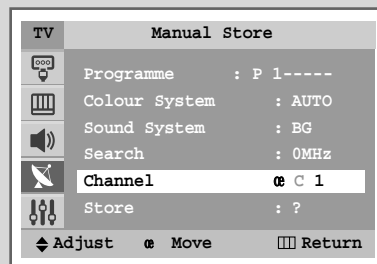

## Skipping Unwanted Channels

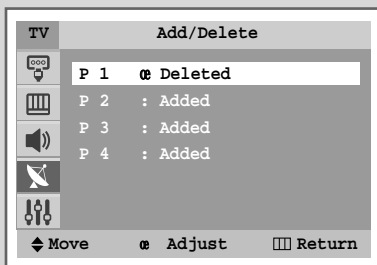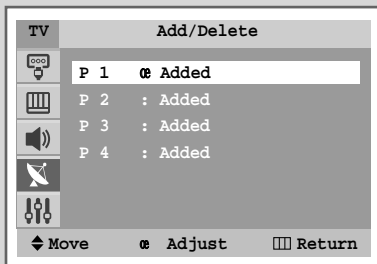

*You can exclude the channels you chosen from the channels you scanned. When you scan through the stored channels, those you have chosen to skip are not displayed.*

*All of the channels that you do not specifically choose to skip are displayed during scanning.*

- 1 Press the **MENU** ( ) button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Channel**.

Result: The options available in the **Channel** group are displayed.

- 3 Press the **↻** or **↵** button.

- 4 Press the **▲** or **▼** button to select **Add/Delete**.

- 5 Press the **↻** or **↵** button.

Result: The stored channels are displayed.

- 6 Press the **▲** or **▼** button to select the channel to add or erase. If necessary, select **Added** or **Deleted** by pressing the **↻** or **↵** button.

- 7 Repeat Step 6 for each channel to be added or erased.

## Assigning Names to Channels

*Channel names will be assigned automatically when channel information is broadcast. These names can be changed, allowing you to assign new names.*

- 1 Press the **MENU** (□□□) button.

Result: The main menu is displayed.

- 2 Press the **▲** or **▼** button to select **Channel**.

Result: The options available in the **Channel** group are displayed.

- 3 Press the **⌘** or **⏏** button.

- 4 Press the **▲** or **▼** button to select **Name**.

- 5 Press the **⌘** or **⏏** button.



Result: The current channels are displayed.

- 6 If necessary, select the channel to be assigned to a new name by pressing the **▲** or **▼** button.



- 7 Press the **⌘** or **⏏** button.

- 8 Press the **▲** or **▼** button to select a letter (A~Z), a number (0~9) or a symbol (-, space). Move on the previous or next letter by pressing the **⌘** or **⏏** button.

- 9 Repeat Steps 6 to 8 for each channel to be assigned to a new name.

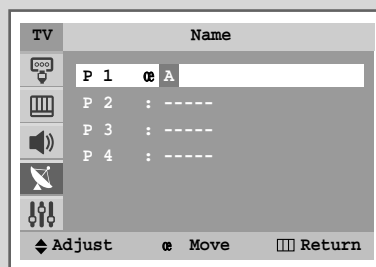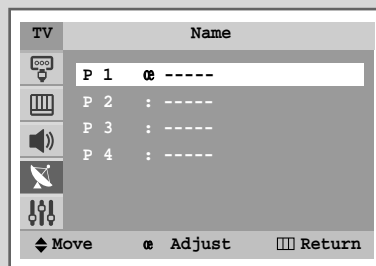

## Fine Tuning Channel Reception

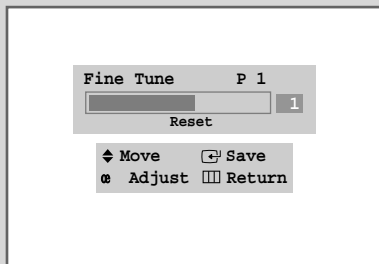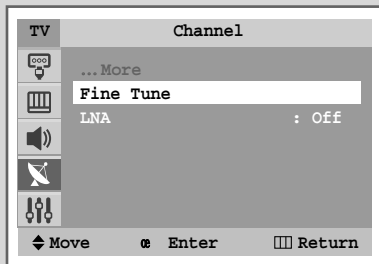

*If the reception is clear, you do not have to fine tune the channel, as this is done automatically during the search and store operation. If the signal is weak or distorted, you may have to fine tune the channel manually.*

- 1 Press the **MENU** (□□□) button.

Result: The main menu is displayed.

- 2 Press the ▲ or ▼ button to select **Channel**.

Result: The options available in the **Channel** group are displayed.

- 3 Press the ⌘ or button.

- 4 Press the ▲ or ▼ button to select **Fine Tune**.

- 5 Press the ⌘ or button.

- 6 To obtain a sharp and clear picture and good sound quality, press the ⌘ or button.

Result: The horizontal bar is displayed. Move the horizontal bar's cursor left or right by pressing the ⌘ or button.

- 7 To store the fine tuning setting in the TV's memory, press the **ENTER** (↵) button.


Result: Channel indicator turns into Red.

- 8 To erase adjusted picture or sound, select **Reset** by pressing the ▲ or ▼ button. Press the **ENTER** (↵) button.

Result: Channel indicator returns to its original colour.

## Using the LNA (Low Noise Amplifier) feature (depending on the model)

*This function is very useful in the situation that the TV is used in weak signal. LNA amplifies the TV signal in the weak signal area, but not noise. This feature is working only weak signal condition, and that is memorized on current channel, additional.*

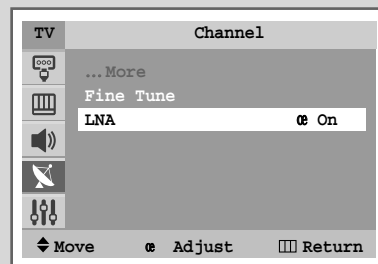


- 1 Press the **MENU** (□□□) button.  
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Channel**.  
Result: The options available in the **Channel** group are displayed.
- 3 Press the **⌘** or **⏻** button.
- 4 Press the **▲** or **▼** button to select **LNA**.
- 5 To activate this feature, select **On** by pressing the **⌘** or **⏻** button.


➤ Setting the LNA option to "On" may produce worse picture quality due to the current channel's signal condition. Hence, apply LNA On/Off selectively according to the picture quality that is currently displayed.

## Changing the Picture Standard

*You can select the type of picture which best corresponds to your viewing requirements.*

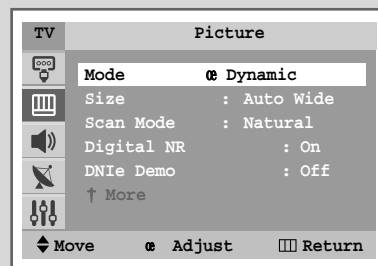

- 1 Press the **MENU** (□□□) button.  
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Picture**.  
Result: The options available in the **Picture** group are displayed.
- 3 Press the **⌘** or **⏻** button.  
Result: The **Mode** is selected.
- 4 Select the required picture mode by pressing the **⌘** or **⏻** button repeatedly.  
Result: The following picture mode are available:  
**Dynamic – Standard – Movie – Custom**





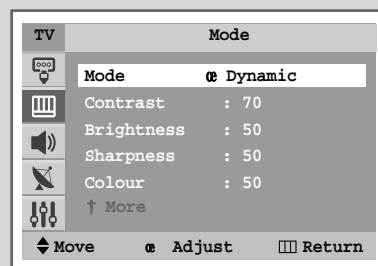


➤ You can also set these options simply by pressing the **P.MODE** (P.MODE ; Picture Mode) button.



# Customizing the Picture Settings

*Your television has several settings which allow you to control the picture quality.*

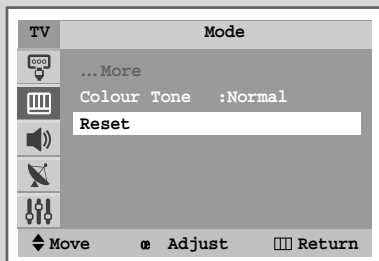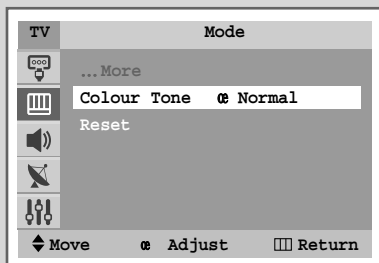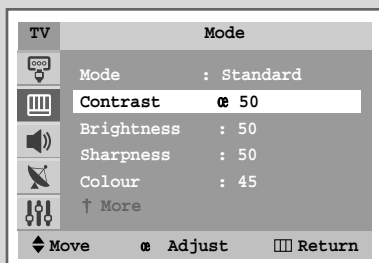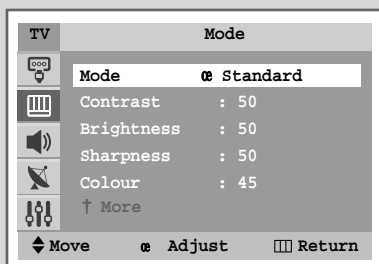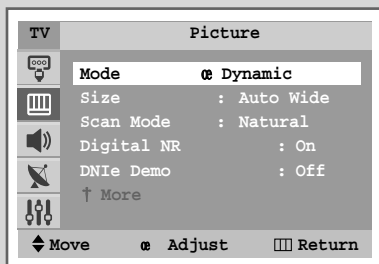

- 1 Press the **MENU** (□□□) button.  
Result: The main menu is displayed.
- 2 Press the **▲** or **▼** button to select **Picture**.  
Result: The options available in the **Picture** group are displayed.
- 3 Press the **⌘** or **□** button.  
Result: The **Mode** is selected.
- 4 Select the required picture mode by pressing the **⌘** or **□** button repeatedly.  
Result: The following picture mode are available:  
**Dynamic – Standard – Movie – Custom**
- 5 Press the **▲** or **▼** button to select the option (**Contrast**, **Brightness**, **Sharpness**, **Colour**, or **Tint-NTSC** only) to be adjusted. Press the **⌘** or **□** button.  
Result: The horizontal bar is displayed. Press the **⌘** or **□** button until you reach the optimal setting.
- 6 Press the **MENU** (□□□) button.  
Result: The available options are displayed again.
- 7 Press the **▲** or **▼** button to select **Colour Tone**. Select the required option by pressing the **⌘** or **□** button repeatedly.  
Result: The following colour tones are available:  
**Warm2 – Warm1 – Normal – Cool1 – Cool2**
- 8 To return to the factory defaults, select **Reset** by pressing the **▲** or **▼** button. Press the **⌘** or **□** button.  
The reset function is set for each mode (**Dynamic**, **Standard**, **Movie**, or **Custom**).  
Result: The previously adjusted settings will be reset to the factory defaults.



- ♦ The television has an “automatic degaussing” system that is activated if magnetic interference is present. To degauss the television screen, switch power off by pressing the “**⓪**” (On/Off) button on the front panel. (Refer to “Automatic Degaussing to Remove Colour Patches” on page 44.)

## Selecting the Picture Size (depending on the model)

You can select the picture size which best corresponds to your viewing requirements simply by pressing the "P.SIZE (P)" button. Depending on the model, the following picture sizes are available:

◆ **Auto Wide, 16:9, Panorama, Zoom1, Zoom2, 4:3**

➤ Lifting is available in the **Zoom1** or **Zoom2** mode by pressing the ▲ or ▼ button.

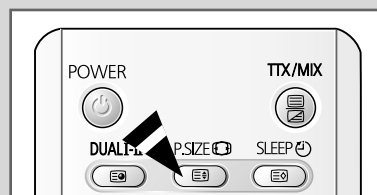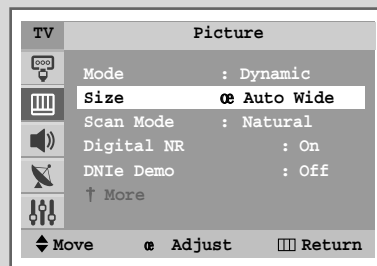

- 1 Press the **MENU** (P) button.  
Result: The main menu is displayed.
- 2 Press the ▲ or ▼ button to select **Picture**.  
Result: The options available in the **Picture** group are displayed.
- 3 Press the α or button.
- 4 Press the ▲ or ▼ button to select **size**.
- 5 Press the α or button to select the picture size.























































